

## Sockets & Switches

### ESM METAL SURFACE MOUNT SERIES



ESM31/1/2A



ESM32/1/2A



ESM33/1/2A



ESM34/1/2A



ESM31D20A



ESM32D20NA



ESM15



ESM25



ESM15/15



ESM31



ESM32



ESM34

| DESCRIPTION  | CATALOGUE NUMBER |
|--|------------------|
| <b>Flush Switches</b>                              |                  |
| <b>1 Gang</b>                                      |                  |
| 10A 1 Gang 1-Way Switch                            | ESM31/1/2A       |
| 10A 1 Gang 2-Way Switch                            | ESM31/2/3A       |
| <b>2 Gang</b>                                      |                  |
| 10A 2 Gang 1-Way Switch                            | ESM32/1/2A       |
| 10A 2 Gang 2-Way Switch                            | ESM32/2/3A       |
| <b>3 Gang</b>                                      |                  |
| 10A 3 Gang 1-Way Switch                            | ESM33/1/2A       |
| 10A 3 Gang 2-Way Switch                            | ESM33/2/3A       |
| <b>4 Gang</b>                                      |                  |
| 10A 4 Gang 1-Way Switch                            | ESM34/1/2A       |
| 10A 4 Gang 2-Way Switch                            | ESM34/2/3A       |
| <b>Bell Switches</b>                               |                  |
| 10A 1 Gang Bell Push Switch with Bell Symbol       | ESM31BPA         |
| 10A 1 Gang Bell Push Switch Marked "Press"         | ESM31BPRPA       |
| 10A 1 Gang Bell Push Switch Marked "Press"         | ESM31BPPRA/P     |
| 10A 2 Gang Push Button Switch with Red/Green Dolly | ESM32BPA         |
| 10A 3 Gang Push Button Switch with Neon            | ESM33BPAN        |
| <b>Single/Double Pole Switch</b>                   |                  |
| <b>Single Pole Switches</b>                        |                  |
| 20A 1 Gang 2-Way Single Pole Switch                | ESM31/20A        |
| 20A 2 Gang 2-Way Single Pole Switch with Neon      | ESM32/20NA       |
| <b>Double Pole Switches</b>                        |                  |
| 20A 1 Gang Double Pole Switch                      | ESM31D20A        |
| 20A 2 Gang Double Pole Switch with Neon            | ESM32D20NA       |
| <b>Socket Outlets</b>                              |                  |
| <b>13A Socket Outlets</b>                          |                  |
| 13A 1 Gang Switched Socket Outlet                  | ESM15            |
| 13A 1 Gang Switched Socket Outlet with Neon        | ESM15N           |
| 13A 2 Gang Switched Socket Outlet                  | ESM25            |
| 13A 2 Gang Switched Socket Outlet with Neon        | ESM25N           |
| <b>15A Socket Outlet</b>                           |                  |
| 15A 1 Gang Switched Socket Outlet                  | ESM15/15         |
| <b>Flush Plates</b>                                |                  |
| 1 Gang Flush Plate                                 | ESM31            |
| 2 Gang Flush Plate                                 | ESM32            |
| 3 Gang Flush Plate                                 | ESM33            |
| 4 Gang Flush Plate                                 | ESM34            |

## Sockets & Switches

### MECHANISM

| DESCRIPTION                                  | CATALOGUE NUMBER |
|--|------------------|
| <b>Switch Mechanism</b>                      |                  |
| 16A 1-Way Switch                             | E30/1M-D         |
| 10A 1-Way Switch                             | 30/1/2M-1D       |
| 10A 2-Way Switch                             | 30M              |
| 15A 2-Way Switch                             | 30M15            |
| 35A 2-Way Switch                             | 30M35            |
| 20A Double Poles Switch                      | 30MD20           |
| 10A 3-Way Switch                             | 30MI             |
| <b>Neon Indicator Mechanism</b>              |                  |
| Neon Indicator 220V - Red Colour             | E32NRD           |
| Neon Indicator 220V - Green Colour           | E32NGN           |
| <b>Multiposition Rotary Switch Mechanism</b> |                  |
| 10A "Hi - Off - Low" Switch                  | 39M              |
| 15A 4-Position, 2 On - 2 Off Rotary Switch   | 30RSM2           |
| 15A 4-Position, 3 On - 1 Off Rotary Switch   | 30RSM3           |
| <b>Bell Switch Mechanism</b>                 |                  |
| 3A Bell Push Switch                          | 30MBP2/3J        |
| 10A Bell "Press" Switch                      | 30MBPR           |
| <b>Data &amp; Telephone Socket Mechanism</b> |                  |
| 4Wire Telephone Socket                       | 30RJ64M          |
| 8Wire Data Socket                            | 30RJ88SMA5       |
| <b>Television Outlet Mechanism</b>           |                  |
| 75 Ohm TV/FM Co Axial Socket                 | 30TV75MS         |
| <b>Socket Mechanism</b>                      |                  |
| 15A 250V 2 Flat Pin Socket                   | 30/405M/J        |
| <b>Fan Control &amp; Dimmer Mechanism</b>    |                  |
| 220-250V 400VA Fan Control                   | 32V400FM/K       |
| 220-250V 500W Dimmer                         | 32V500M/K        |



30/1/2M-1D



30MI



E32NRD



39M



30RSM2



30RSM3



30MBP2/3J



30RJ64M



30RJ88SMA5



30TV75MS



30/405M/J



32V400FM/K



32V500M/K