

Control and signaling units Ø 22

Harmony Easy XA2, plastic

Pushbuttons, push-push

Emergency switching off pushbuttons

PF132017



XA2EH021

Pushbuttons, push-push with flush push					
Shape of head	Type of contacts		Color of push	Reference	Weight kg/lb
	N/O	N/C			
	1	–	White	XA2EH011	0.04/0.088
	1	–	Black	XA2EH021	0.04/0.088
	1	–	Green	XA2EH031	0.04/0.088
	–	1	Red	XA2EH042	0.04/0.088
	1	–	Yellow	XA2EH051	0.04/0.088
	1	–	Blue	XA2EH061	0.04/0.088

PF132022



XA2ET42

Emergency switching off pushbuttons						
Shape of head	Type of push	Type of contacts	Color	Diameter Ø (mm)/in.	Reference	Weight kg/lb
	Push-pull	 N/C	Red	40/1.575	XA2ET42	0.088/0.194
	Turn to release	1	Red	30/1.181	XA2ES442	0.056/0.123
			Red	40/1.575	XA2ES542	0.058/0.128
			Red	60/2.362	XA2ES642	0.064/0.141
			Black	30/1.181	XA2ES422	0.056/0.123

Note: Please refer to our website www.schneider-electric.com for information on dimensions