

# Control and signaling units Ø 22

Harmony Easy XA2, plastic

 
 

Pushbuttons, push-push

Emergency switching off pushbuttons

PF132017



 


XA2EH021

Pushbuttons, push-push with flush push					
Shape of head	Type of contacts	Color of push	Reference	Weight kg/lb	
	 N/O  N/C				
	1 –	White	<b>XA2EH011</b>	0.04/0.088	
	1 –	Black	<b>XA2EH021</b>	0.04/0.088	
	1 –	Green	<b>XA2EH031</b>	0.04/0.088	
	– 1	Red	<b>XA2EH042</b>	0.04/0.088	
	1 –	Yellow	<b>XA2EH051</b>	0.04/0.088	
	1 –	Blue	<b>XA2EH061</b>	0.04/0.088	

PF132022



XA2ET42

Emergency switching off pushbuttons						
Shape of head	Type of push	Type of contacts	Color	Diameter Ø (mm)/in.	Reference	Weight kg/lb
		 N/C				
	Push-pull	1	Red	40/1.575	<b>XA2ET42</b>	0.088/0.194
	Turn to release	1	Red	30/1.181	<b>XA2ES442</b>	0.056/0.123
			Red	40/1.575	<b>XA2ES542</b>	0.058/0.128
			Red	60/2.362	<b>XA2ES642</b>	0.064/0.141
			Black	30/1.181	<b>XA2ES422</b>	0.056/0.123

Note: Please refer to our website [www.schneider-electric.com](http://www.schneider-electric.com) for information on dimensions